


HOW TO TEST A WINCH SOLENOID

1. Make a circuit using the 12 volt battery to the 2 small threaded terminals. It does not matter which way the connection is made. You will hear the solenoid click (engage) this is normal.
2. Using a meter with a continuity setting hold the red & black probes on either of the 2 large copper threaded terminals - it does not matter which way the connection is made.
3. If all is working the meter should buzz (or show minimal resistance if testing on the Ohm setting).

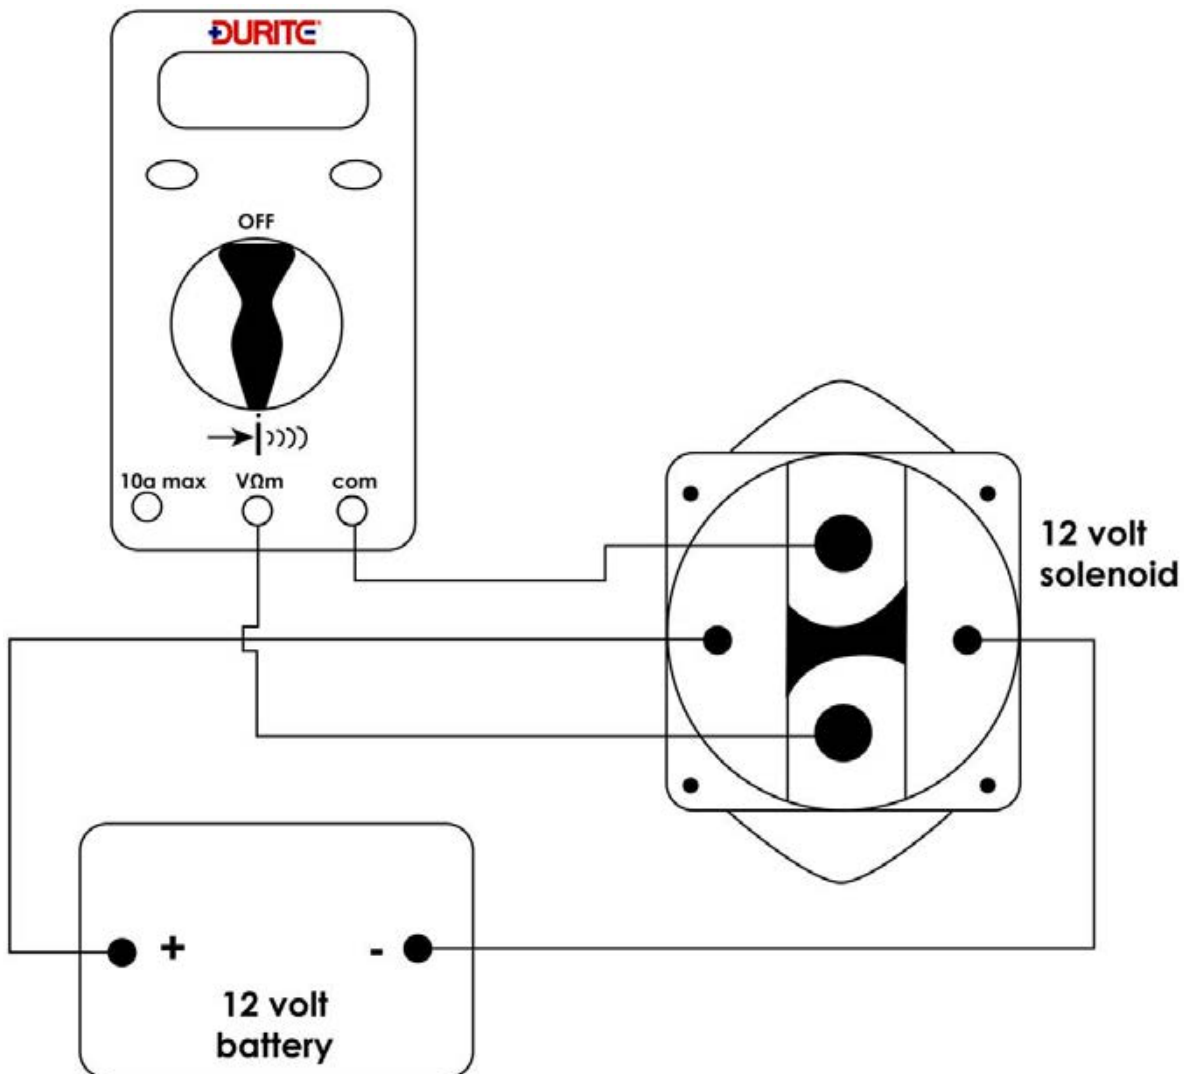

If you are unsure check with an auto electrician or contact your winch supplier.

Extreme 4x4 Ltd does not accept any responsibility for parts, which are not fitted correctly.

Always drive your vehicle according to the prevailing conditions and your own driving ability.